



NTI Boilers Inc.
Toll Free: 1-800-688-2575
Web: www.ntiboilers.com
Email: info@ntiboilers.com

64980095

30 PSI Pressure Relief Valve

Applicable Boiler Models

- All boilers 400mBTU and lower

Kit Contents

- Relief valve
- 1" Reinz gasket



Replacement Instructions

- 1) Turn power to the boiler off at the source.
- 2) Isolate and drain the boiler.
- 3) Remove and replace the relief valve.
- 4) Refill the boiler while purging air form the system.

Note - on boiler models equipped with a pipe adapter for connecting the PRV to the heat exchanger, the inlet gasket to the pipe adapter may need to be replaced. Removable adapter on a TRX boiler shown below.

