

Legacy Sentry 2000 to 2100 Conversion Instructions

Part number 81930

((Caution: Be sure that the Aux. Pump [Ap] (Orange) for the indirect water heater, and , F1 (Brown, or purple) wire are marretted off, if not n used))

1. Unwire and remove Sentry 2000 controller from the boiler.
2. Using the template provided, located and drill the three new mounting holes for the new Sentry 2100.
3. Secure the sentry 2100 to the control panel.
4. Place the control panel cover onto the Jacket. The Sentry 2100 should be visible both vertically, and horizontally.
5. Take the filler panel provided and center the filler panel over the control.
6. Mark the two mounting holes with a pencil.
7. Using a 1/4" drill bit, drill out the two holes you just marked.
8. Remove the plastic from the blue filler panel.
9. Remove the control panel cover and screw the filler panel, to the back of the Control panel cover. The Panel should now be centered.
10. Rewire the harness as described in the manual. The unit is ready to start-up.
11. Use the instructions to ensure proper settings and operation.

81930 Legacy Sentry 2000 to Sentry 2100 Conversion Kit

Package Includes:

- 1 - Sentry 2100 Controller.
- 1 - Safety Hi Limit Switch.
- 1 - Four-wire Sentry Probe Adaptor
- 1 - Six-wire Quick-connect wire harnesses.
- 1 - Outdoor Probe Sensor.
- 1 - Boiler Probe Sensor.
- 1 - Grey Conversion Plate.
- 6 - #8x 1/2" Sheet metal Screws
- 1 - Conversion instructions.
- 1 - Sentry 2100 Sentry 2100 Installation Instructions.

Top

