

**NY Thermal Inc.**  
 Tel: (506) 657-6000  
 Toll Free: 1-800-688-2575  
 Fax: 1-506-432-1135  
 Web: www.nythermal.com  
 Email: info@nythermal.com

## 84803

# Clip, Pressure Sensor Grundfos (Tx)

(96654843 - Clip for Pressure Sensor and DHW Flow Sensor)

### Applicable Boiler Models

- Tx51
- Tx81
- Tx101
- Tx151
- Tx151C

### Kit Contents



- 1 Grundfos Pressure Sensor Clip

### Tools Required

- ¼" Nut Driver

### Replacement Instructions

- 1) Turn off power and gas to the boiler.
- 2) Drain boiler of water.
- 3) Remove front cover.
- 4) Remove retaining screw and swing control panel out of the way.
- 5) Press on the pressure sensor and remove clip.
- 6) Push sensor firmly in place.
- 7) Re-install clip.
- 8) Press and pull on sensor to ensure that the clip is correctly seated.
- 9) Refill boiler with water and purge excess air.
- 10) Turn on gas and power and check for proper operation.

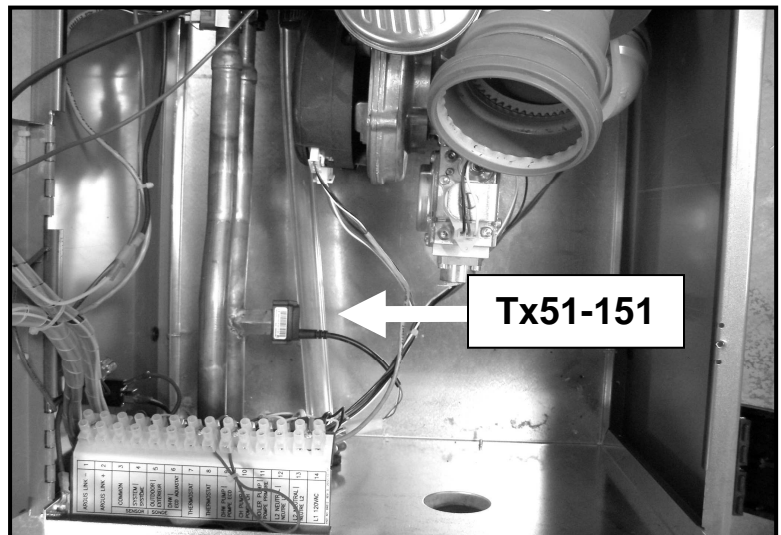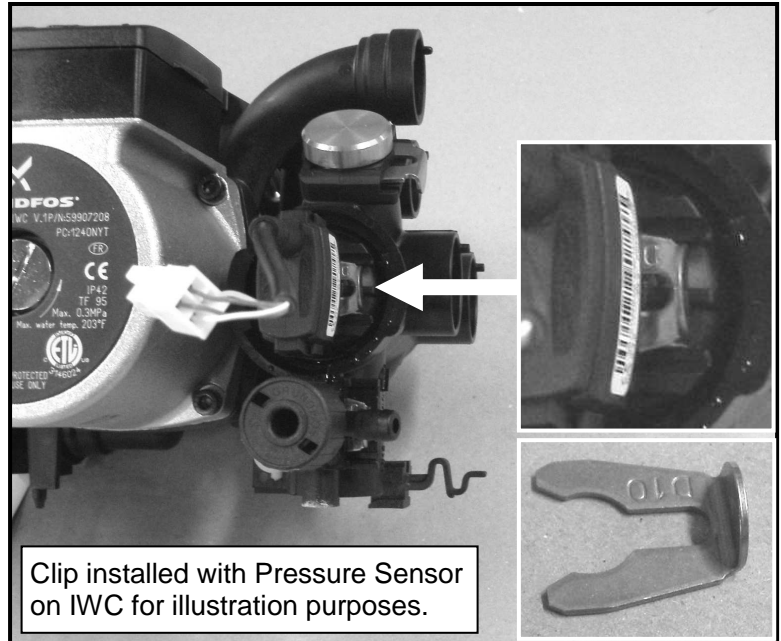

#### CAUTION

**Air in Boiler** - Ensure the boiler is completely filled with water to 15psi minimum, and that all the air is purged. Failure to do so could result in boiler malfunction resulting in property damage.

#### CAUTION

**Clip installatoin** - Failure to properly seat the retaining clip will result in water leakage causing property damage.