

NY Thermal Inc.
Tel: (506) 657-6000
Toll Free: 1-800-688-2575
Fax: 1-506-432-1135
Web: www.nythermal.com
Email: info@nythermal.com

84919 Gas Valve to Venturi Gasket

Applicable Boiler Models

- Tx51, Tx81, Tx101, Tx151, Tx151C
- VM110, VM110P, VM153, VM153P
- TFT154

Kit Contents

- 1 Gasket

Tools Required

- T-25 Torx Screwdriver
- ¼" Nut Driver

Replacement Instructions

- 1) Turn off power and gas to the boiler.
- 2) Remove tubing from gas valve.
- 3) Remove gas line from the gas valve.
- 4) Disconnect the gas valve from fan assembly
- 5) Lower the gas valve to access the gasket
- 6) Replace gas valve to venturi gasket and transfer the Lp orifice if used.
- 7) Re-assemble in the reverse order.



⚠ WARNING **Explosion Hazard-** Failure to properly reseal gasket will result in gas leakage which may lead to property damage, serious injury or death.

⚠ WARNING **Propane applications-** When operating with Lp gas, ensure that the propane orifice is transferred and correctly installed. Failure to do so will result in excessive Carbon Monoxide levels which may lead to serious injury or death.