



NY Thermal Inc. Tel: (506) 657-6000 Toll Free: 1-800-688-2575 Fax: 1-506-432-1135 Web: www.nythermal.com Email: info@nythermal.com

## 84968

# **O-ring D12x3 Small**

Combi Block DHW Brass Fitting

#### **Applicable Boiler Models**

Tx151C

#### **Kit Contents**

• 1 O-ring D12x3 Small (thick)

## **Tools Required**

- 1/4" Nut Driver
- 6mm Allen wrench
- T25 screwdriver

### **Replacement Instructions**

- Turn off power and gas to the boiler at the circuit breaker or external service switch.
- 2) Drain boiler of water.
- 3) Remove retaining screw and swing the control panel out of the way.
- 4) Remove field installed wiring from the boiler terminal strip. **See Figure 2.**
- 5) Remove the two screws securing the wiring terminal strip to the bottom of the boiler and push the terminal strip out of the way. **See Figure 3.**
- 6) Remove the diverting valve actuator by pulling it up, and move out of the way
- 7) Remove all wires attached to the combi block see Figure 6.
- 8) Unlock pipe retaining clips and pull both internal boiler pipes out of the combi block. See Figures 4 and 5.
- 9) Use an Allen wrench and turn the IWC retaining locks counter clockwise while holding the safety clips up, until they are unlocked. **See Figure 6.**
- 10) Remove the 4 screws holding the combi block to the boiler base
- 11) Remove combi block by pulling it up
- 12) Remove O-ring from fitting and replace.
- 13) Reinstallation is the reverse of disassembly.

**CAUTION** Air in Boiler - Ensure the boiler is completely filled with water to a minimum of 15psi and that all the air is purged. Failure to do so may cause a boiler malfunction which could result in property damage.

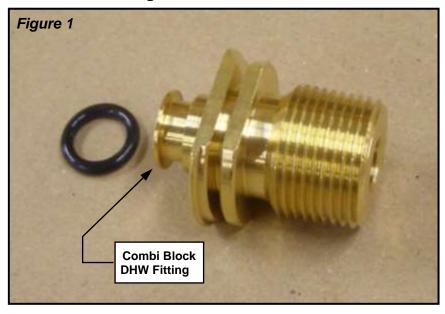


Figure 2: Wiring terminal strip

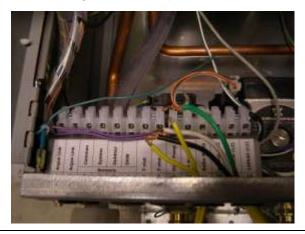


Figure 4: Right retaining clip in unlocked position



Figure 3: Moving wiring terminal strip



Figure 5: Right retaining clip in locked position



Figure 6: Combi block retaining Clips and Locks

