

NTI Boilers
Tel: (506) 657-6000
Toll Free: 1-800-688-2575
Fax: 1-506-432-1135
Web: www.nitboilers.com
Email: info@ntiboilers.com

86193 Flue Seal Retainer

⚠ WARNING

This boiler must be serviced by a qualified heating technician. Failure to properly maintain or service this appliance may result in property damage, serious injury to occupants or, death.

Applicable Boiler Models

- Tft154
- FTV (all models)
- Vmax (all models)

Kit Contents

- 1 Seal retaining clamp
- 1 screw 10-24 by 1 ¼"
- 1 85208 Flue sensor Grommet



Tools required:

- 5/16" nut driver
- ¼" nut driver

Replacement Instructions

- 1) Turn off power and gas to the boiler
- 2) Shape the new clamp around the flue pipe
- 3) Position the hole in the clamp over the hole in the flue sensor grommet
- 4) Insert the Flue sensor through the clamp and into the grommet
- 5) Tighten the screw in the clamp until the two sides are closed
- 6) Turn the boiler and gas on and check for proper operation



⚠ WARNING

Flue Sensor Installation – The Flue sensor and sensor grommet prevent flue gas from escaping. Failure to properly install the sensor or grommet will result in flue gas leakage leading to serious injury or death.