

NTI Boilers Inc.
Tel: (506) 657-6000
Toll Free: 1-800-688-2575
Fax: 1-506-432-1135
Web: www.ntiboilers.com
Email: info@ntiboilers.com

87252 Display Assembly


Applicable Boiler Models
All Tx, Vmax, FTV Boilers

Kit Contents

- 84825 Graphic Overlay x1
- 84826 Screw x12
- 86002 Display Argusvision
- 87421 Screen Wire

Tools Required

- 1/4" Nut Driver
- No 2 Phillips screwdriver

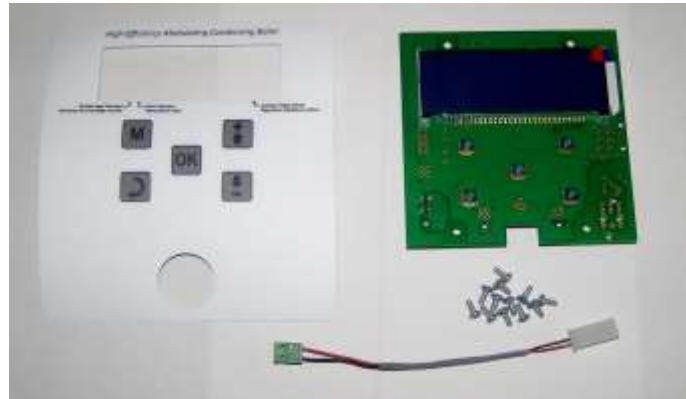

Replacement Instructions

- 1) Turn off power to the boiler at the breaker.
- 2) Remove front display
- 3) Flip display over and remove 4 screws in plastic housing and remove housing.



Turn off power at the source ie. Circuit breaker or electrical service switch. Failure to do so will result in an electrical shock when removing wiring from the display service switch.



- 4) Take 4 screws holding electrical board in place and remove board.
- 5) Remove protective coating on new display.
- 6) Install in reverse order.
- 7) Turn power on and set **Appliance Type** – see boiler installation manual.

When connecting the wire to the board make sure the screw heads are facing you.

