

**NTI Boilers**

Tel: (506) 657-6000  
Toll Free: 1-800-688-2575  
Fax: 1-506-432-1135  
Web: www.nitboilers.com  
Email: info@ntiboilers.com

# 30008571A

## Flow Sensor Assembly

**⚠ WARNING**

This boiler must be serviced by a qualified heating technician. Failure to properly maintain or service this appliance may result in property damage, serious injury to occupants or, death.

**Applicable Boiler Models**

- GF200

**Kit Contents**

- 1 30008571A Flow Sensor
- 1 O-Ring (Φ17.5x2.7t)

**Tools required:**

- #2 Phillips Screwdriver

**Replacement Instructions**

- 1) Turn off the gas supply to the unit.
- 2) Disconnect the unit from the power supply
- 3) Turn off the water supply to the unit. Drain all water from the appliance.  
Remove the stainless clip and four screws at the flow sensor
- 4) Remove the flow sensor



- 5) Install the O-ring on to the cold water inlet pipe first. \*\* See Below\*\*

**⚠ WARNING**

**Flow Sensor Installation** – Failure to properly install the flow sensor and O-ring will result in water leakage.

- 6) Install the flow sensor
- 7) Turn on water supply, and check for leaks
- 8) Power up the unit and turn a call for heating on
- 9) Turn the hot water on and off several times to bleed air from the unit
- 10) Turn the gas back on and ensure proper operation for both heating and hot water