

NTI
Tel: (506) 657-6000
Toll Free: 1-800-688-2575
Web: www.NTIBoilers.com
Email: info@NTIBoilers.com

86702 Tft Drip Cover

Applicable Boiler Models

- Tft All Models

Kit Contents

- Drip Cover c/w edging
- Drill point screws X2



Tools Required

- Drill
- 1/4" nut driver
- 1/8" Drill bit (optional see instructions)

Installation Instructions:

- Line the cover up to the right side of the galvanized screen mounting bracket
- Mark the screw hole locations

Figure 1 Drip Cover Kit

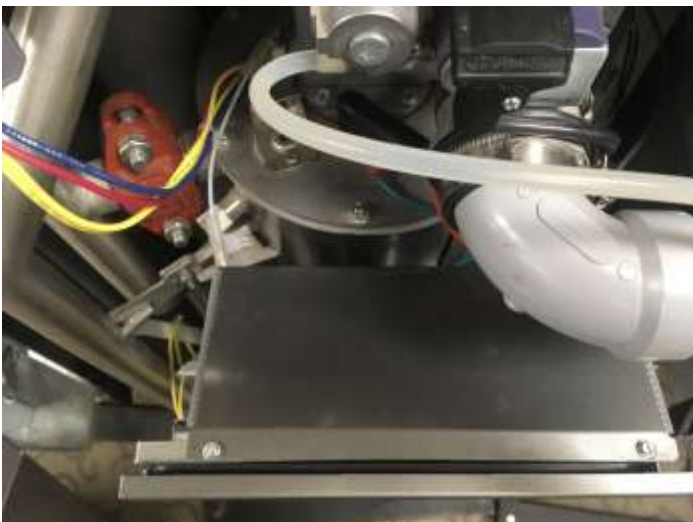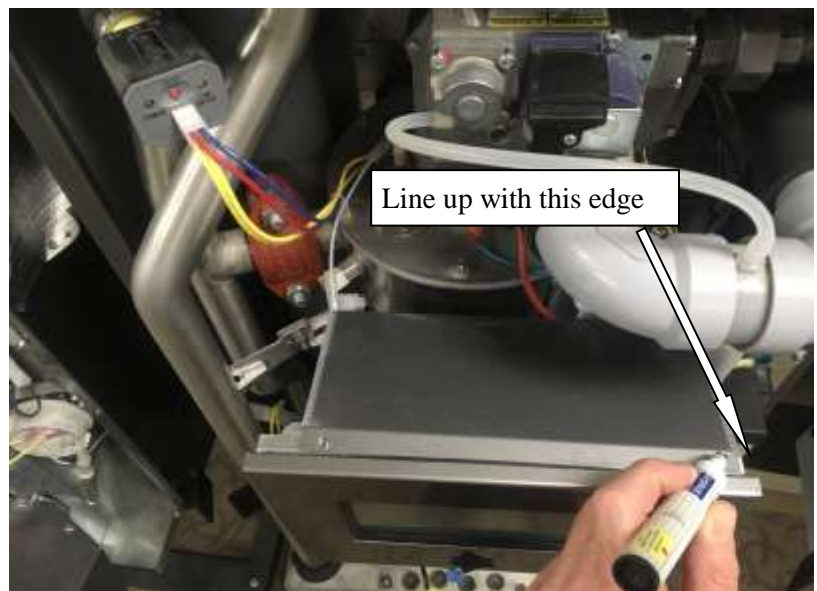

- Use a 1/8" drill bit or self drilling screws(provided) to drill holes and secure the cover.
- Check interference with wiring before securing the drip cover with the screws provided.